


Application Note – Hydroxyl Number in Polyols

The use of polymeric polyols is commonplace in the manufacturing of polyurethanes and other specialty polymers. The hydroxyl number (OH number) is a measure of the concentration of the hydroxyl groups on the polyol. This is an important parameter to monitor and control during polyol production. The laboratory method that is commonplace for hydroxyl number determination is both time consuming and involves the use of hazardous materials. This note will discuss the use of Guided Wave hardware and software tools for the measurement of hydroxyl number in polyols using fiber optic-based, Near-Infrared (NIR) spectroscopy. NIR can be applied in real time directly in process monitoring or as a laboratory procedure. In either case NIR is a time and money saving alternative to traditional methods. NIR also offers the benefit of increased safety over traditional methods.

Figure 1 NIR Spectra of Polyether Polyol Samples

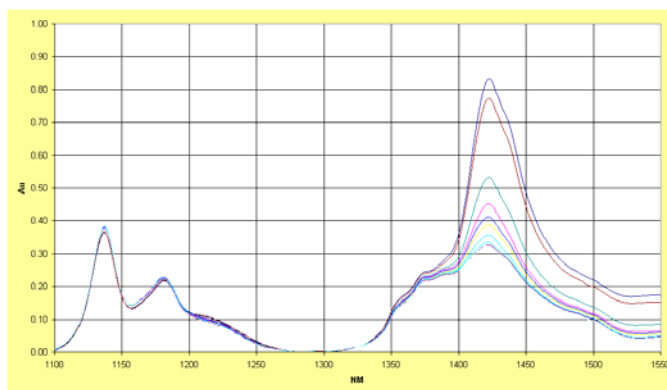

Measurement Background

The NIR region of the electromagnetic spectrum allows the use of the overtone and combination bands of the C-H, O-H, and N-H fundamentals. By measuring the NIR spectra of a series of polyol samples of known hydroxyl number, a quantitative model can be developed which will allow the measurement of hydroxyl number in future samples based only on their NIR spectrum. Guided Wave analyzer systems use fiber optics to allow the sample probe to be located in remote locations away from the spectrophotometer itself.

Experimental

The NIR spectra of a group of different process polyether polyol samples were measured between 1000 and 1600 nm using a Guided Wave Model 310 NIR Spectrophotometer. Figure 1 shows the absorbance spectra of some representative samples using an on-line process probe with a 1 cm pathlength. The hydroxyl number for these samples ranges from 9 to 44. For this application, data preprocessing consisted of a simple 2-point

baseline correction to remove any offset. The spectra and concentration data were submitted to the Unscrambler[™] software and a calibration model was developed using PLS regression methodology. For a discussion of PLS and other multivariate calibration techniques please see Martens & Naes¹ and ASTM E1655².

Results

The model was used to predict hydroxyl number values in a laboratory setting. The results for this are shown in Figure 2 as a scatter plot. The model produced a prediction RMSEP (root mean square error of prediction) of 1.8. This is in good agreement with the accuracy of the standard laboratory method.

Conclusion

The measurement of OH number of polyols using NIR spectroscopy is both fast and reliable utilizing the Guided Wave hardware and software tools as described here. This method minimizes the need for performing the previous laboratory method and hence the results are available in real-time

(seconds). This method can be applied in a reactor system for control of this important property during the reaction and to determine the endpoint of the reaction thus adding to the savings. For more detailed information regarding system specifications please contact a Guided Wave sales or technical specialist.

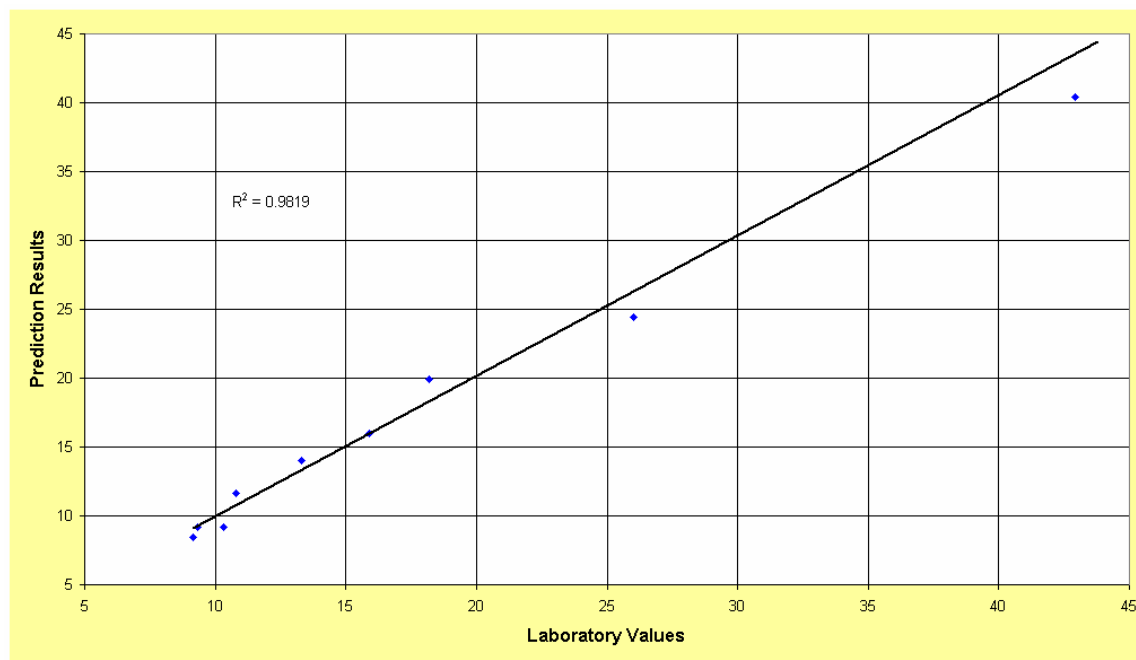


Figure 2 OH Number Laboratory vs NIR

References

1. H. Martens, T. Naes, Multivariate Calibration, John Wiley & Sons, 1989.
2. ASTM E1655 Standard Practices for Infrared, Multivariate, Quantitative Analysis.

Guided Wave Incorporated

3033 Gold Canal Drive
Rancho Cordova, CA 95670
USA
Tel: 916.638.4944; Fax: 916.635.8458
gwinfo@guided-wave.com

www.guided-wave.com

Guided Wave BV

PO Box 427
7550 AK Hengelo (o)
The Netherlands
Tel: +31.74.2595390; Fax: +31.74.2595752
info@guided-wave-europe.nl